# WAKOL Applicator 90 - Components





# **Transport Case**

The hard shell case consisting of a foam inlet, WAKOL Applicator 90, a Spreader Head, WAKOL Replaceable Nozzle, 200 mm wide, bracket in 200 mm wide, a charger with two batteries, two brackets as well as a strap. The case is used for storage and transportation of WAKOL Applicator 90 with accessories.



#### Charger

Quick charger unit 110-240 Volt

#### Indicator LED's:

- Red light: Ready for use
- \*\* Red flashing: Battery is overheated, too cold or defective
- Green light: Full battery
- **★** Green flashing: Battery charging



#### **Adhesive Barrel**

The Adhesive Barrel is designed for Wakol Wood Flooring Adhesive in tubular bags with a 88 mm diameter.



#### **Drive**

Adhesive application through the electric drive without any special effort. The drive is fastened to Adhesive.



#### **Spreader Head**

The Spreader Head is screwed on Adhesive Barrel by hand. Under consideration of the parquet width, the Bracket and WAKOL Replaceable Nozzle is installed on the Spreader Head.



#### **Bracket**

The Bracket consist of 5 mm thick steel. The application width standard width can be adjusted by changing the bracket in combination with the WAKOL Replaceable Nozzle to a different size.

Available in 200 mm (standard width) and 414 mm wide.



## **WAKOL Replaceable Nozzle**

Replaceable nozzles available in 200 mm and 400 mm wide and in different spreading pattern for use in WAKOL Applicator 90. During a pause the holes can be protected by a simple tape to prevent curing of the adhesive. Packaging: 5 or 7 nozzles in box.

# WAKOL Applicator 90 - Operation





## **Setting Case and Stand**

The loading bay has two parts. They are inserted from the outside of the case into matching holes and locked against tilting when they match into the bottom lid.

- 1. Empty the case, lock it and put it flat on the floor.
- 2. Insert the legs of the stand into the holes of the lid and catch the counterlock inside.

Tip: Put a package of Wakol tubular bags on the case – it helps to stabalize the case.



# Spreader Head: Change of /Install the Bracket with WAKOL Replaceable Nozzle

- 1. Choose suitable replaceable nozzle according to the width of the parquet floor.
- 2. Screw on WAKOL Replaceable Nozzle.
- 3. Change: Release the fixing screws of the spreader tube, pull of the tube and dispose. Remove cured adhesive from the adhesive inlet; apply Spreader Head.

Remark: Liquid remains of adhesive do not necessarily need to be removed.



### **Loading Wakol Tubular Bag**

- 1. Release the rack and pull it on the handle fully back.
- 2. Insert a Wakol tubular bag in the WAKOL Applicator 90 and cut off the tip.
- 3. Screw on Spreader Head.
- 4. Push the rack forward until it hits the end of the sachet.
- 5. Take the applicator; Apply adhesive ridges with the applicator parallel to the laying direction.
- 6. Insert immediately the parquet and press down firmly.
- 7. Remove the spreader head and store it on the loading stand's hooks.
- 8. Push the empty skin out with the drive.



#### Other

Prepare the used appliacator as follows: Remaining adhesive in the adhesive barrel or in the srew connection of the spreader head must be removed with WAKOL RT 5960 Cleaning Towels. We recommend to let residues of adhesive inside the supply funnel cure and than to remove it.

Please always observe the technical information before processing.