




Instructions for WAKOL Applicator 90

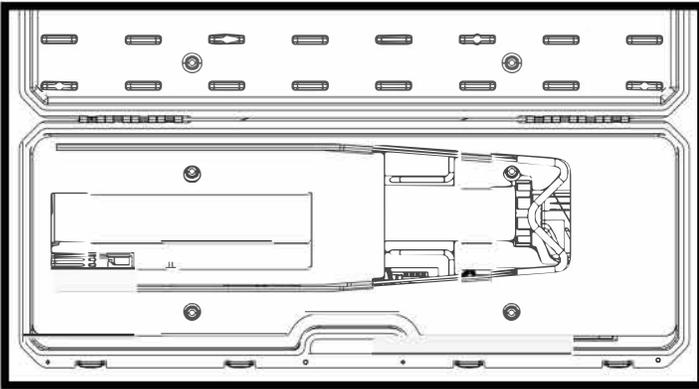


Open case

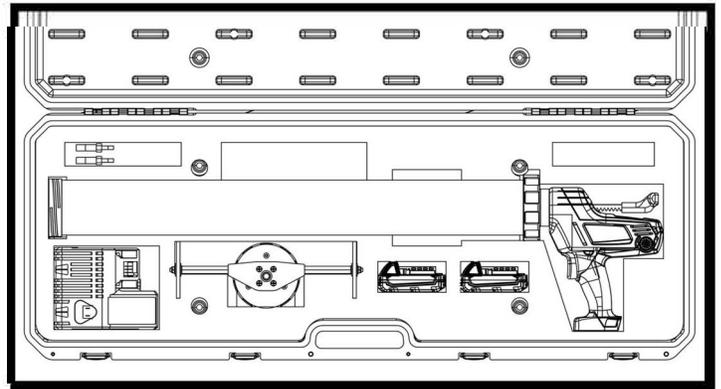


Remove upper foam and applicator components

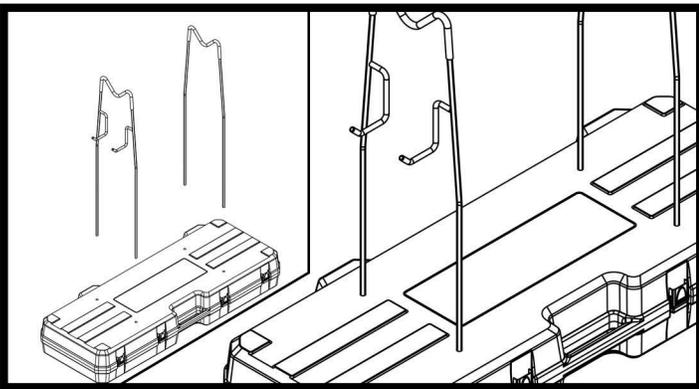


Remove stands from foam & place into closed case

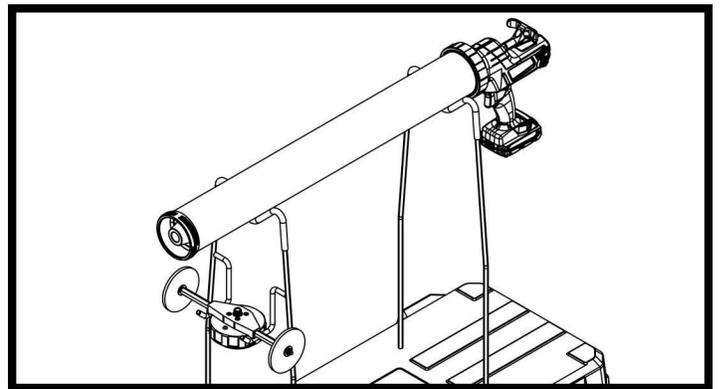


Place applicator & cap assembly on stand

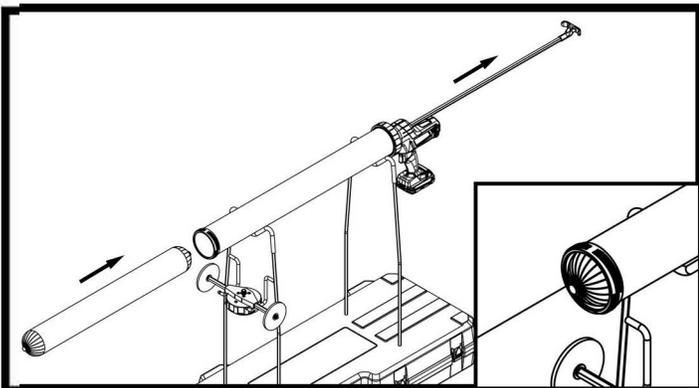


Pull back rack & insert sausage

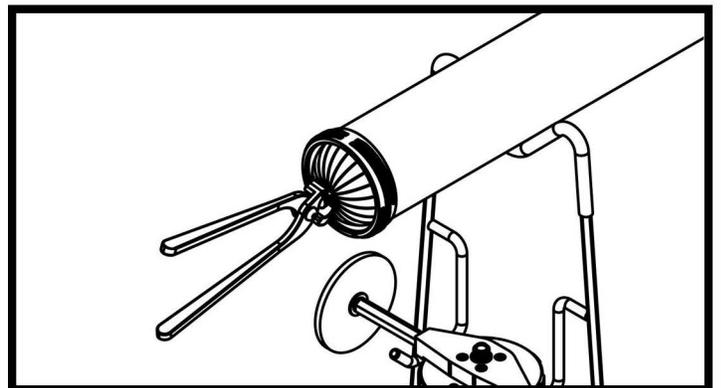

Cut sausage directly behind metal band


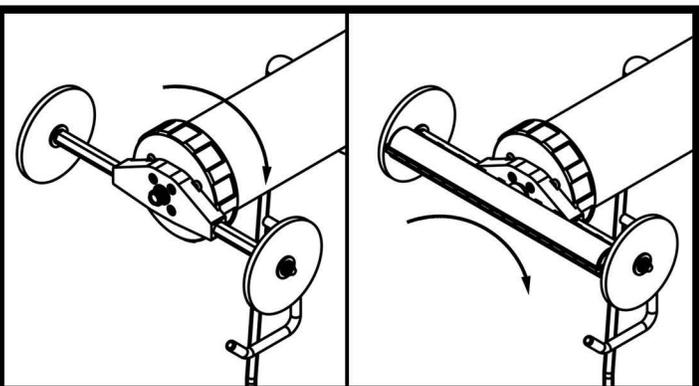


Screw on front cap assembly & nozzle

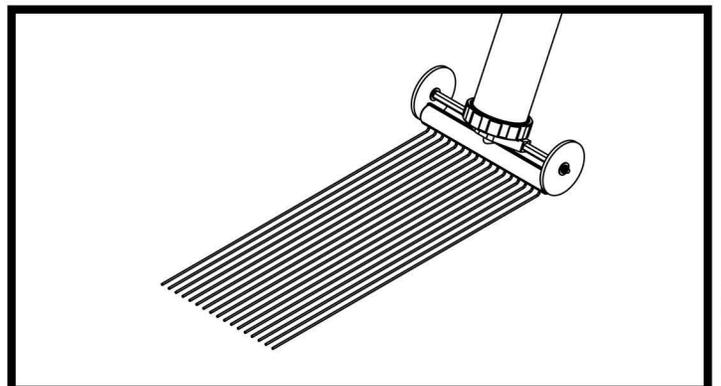


Applicator is now ready for dispensing


Front Cap Assembly Conversion

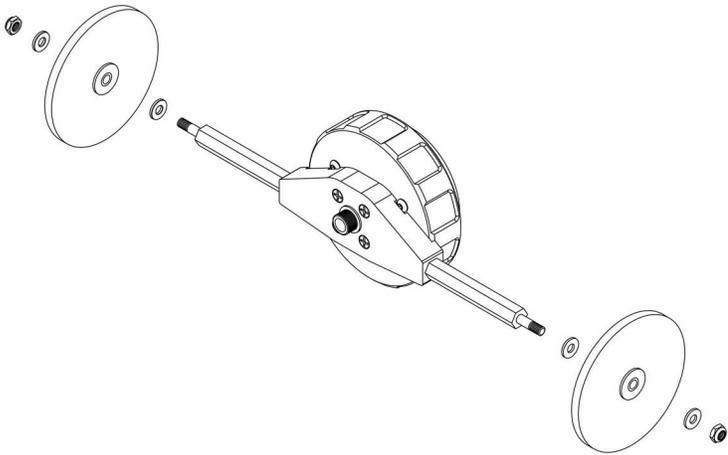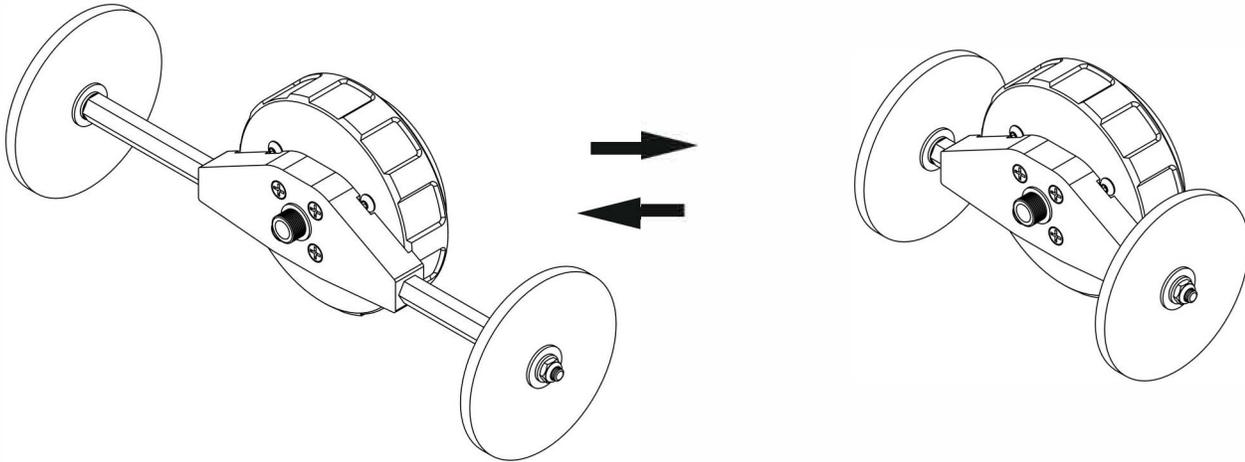


Remove outer wheels using 7/16" wrench

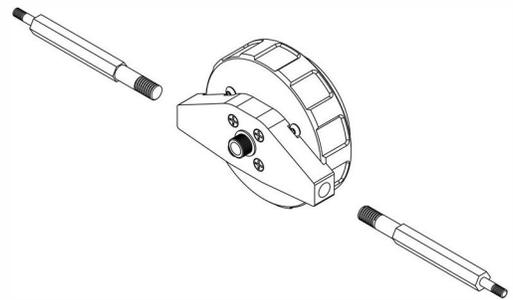

Remove axles using 1/2" wrench

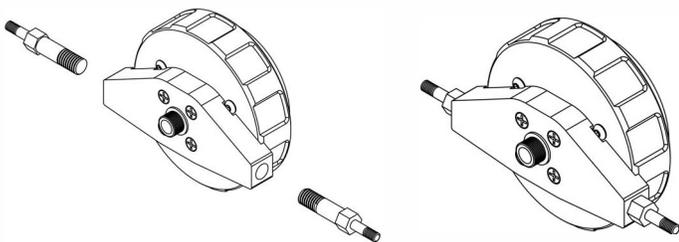

Attach alternate axles

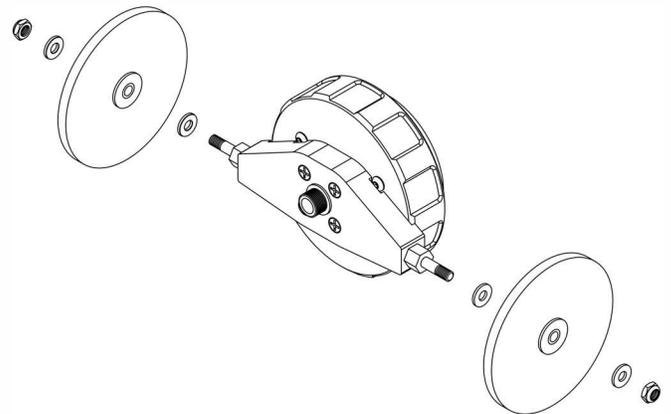

Attach washers, wheels & nuts
Wheels should spin freely when connected

Please always observe Technical Data Sheet